

INSTELLEN / OPHEFFEN VAN DE CEPT-BLOKKERING

Indien er klanten zijn die de Georges anders willen hebben dan in de CEPT 40CH 4W FM uitvoering kan dit via een modificatie.

Voor Nederland verandert de set hiermee van een CEPT toestel in een zogenaamd klasse 3 toestel. Bezit en gebruik van de set zijn dan gebonden aan een machtiging.

Tevens vervalt na modificatie de 3 jaar fabrieksgarantie.

De modificatie bestaat uit het aanbrengen van een weerstand (R780) 560 Ohm 1/4Watt 5%. (groen-blauw-bruin-goud)
Het verdient aanbeveling de gehele weerstand te plaatsen in een (krimp)kous om kortsluiting op de processor te voorkomen.

Wees voorzichtig met solderen, op de print bevinden zich kwetsbare sporen en componenten.

Plaats van R780.


* Verwijder de boven en onderplaat.

* Verwijder voorfront.

* Maak print achter het voorfront los.

* U ziet de processor IC701 (Uniden UC1520)

De tekening (zie achterzijde) en de foto (onder) laten U zien op welke punten U de weerstand dient aan te sluiten.

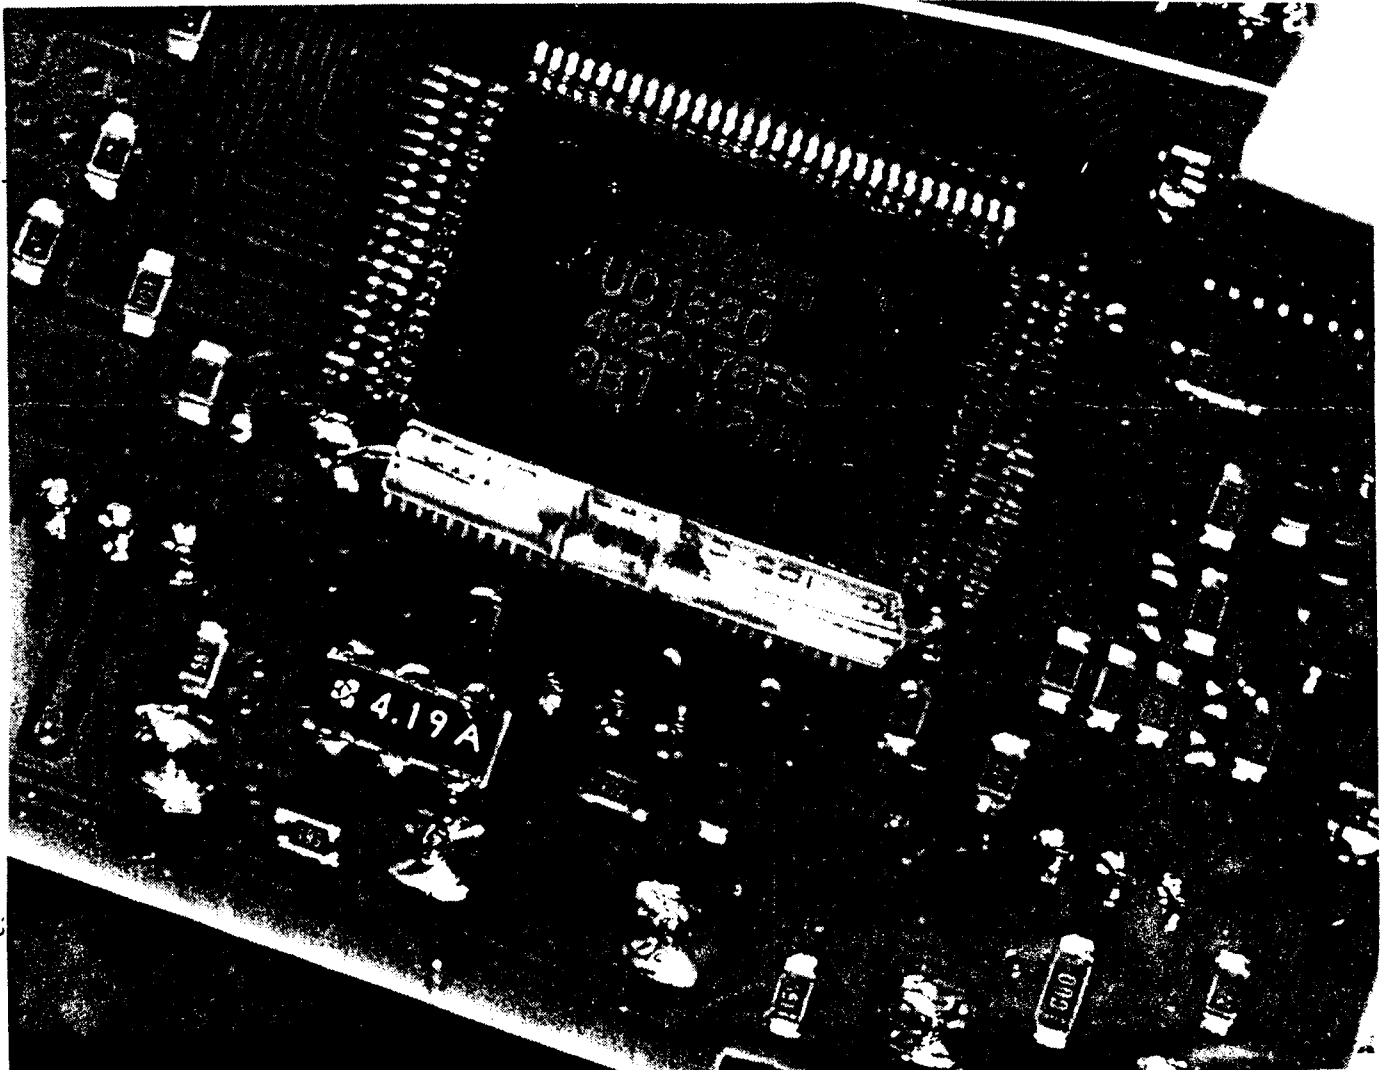

GEORGE, CHANGING THE CONFIGURATION.

- *How to change to the international configuration 240 ch, 15 W AM/FM, 21 W SSB.*

Programming:

- Turn your set on by pushing **POWER**.
- Turn your set off by pushing **POWER**.
- Depress **POWER** and keep pressed down. Your set goes on and then goes off.
- Keep **POWER** depressed and press **PA** and **DIMMER** simultaneously.
- Release **POWER** while keeping **PA** and **DIMMER** pressed down: "code" flashes in the display for 5 seconds.
- "code" disappears and the display remains lit up.
- Release **PA** and **DIMMER**.
- Press **M1**, the display goes out.
- Enter your access code, then press **POWER**. Your set is now in the international configuration.

Available functions in the international configuration:

DIMMER:

In the international configuration only, the **DIMMER** key allows you to change band, thereby giving you the use of 240 channels.

*** A short depression allows you to advance by one band at a time A B C D E F A.....(6 bands, 40 channels).

*** A longer depression allows you to do the same thing in reverse F E D C B A F.....

SELECT:

This key allows you to go up or down by 5 KHz at a time around the reference channel. It is used in conjunction with the with the «CH ▲» y «CH ▼» keys.

- *How to return to the FM norm 40 channels, 4 W FM (CEPT)*


Programming:

- Turn your set on by pushing **POWER**.
- Turn your set off by pushing **POWER**.
- Depress **POWER** and keep pressed down. Your set goes on and then goes off.
- Keep **POWER** depressed and press **PA** and **DIMMER** simultaneously.
- Release **POWER** while keeping **PA** and **POWER** pressed down: "code" flashes in the display for 5 seconds.
- "code" disappears and the display remains lit up.
- Release **PA** and **POWER**.
- Press **M3** : the display goes off.
- Enter your access code, then press **POWER**. Your set is now in the French configuration.

GEORGE

10/94

Front Panel PCB

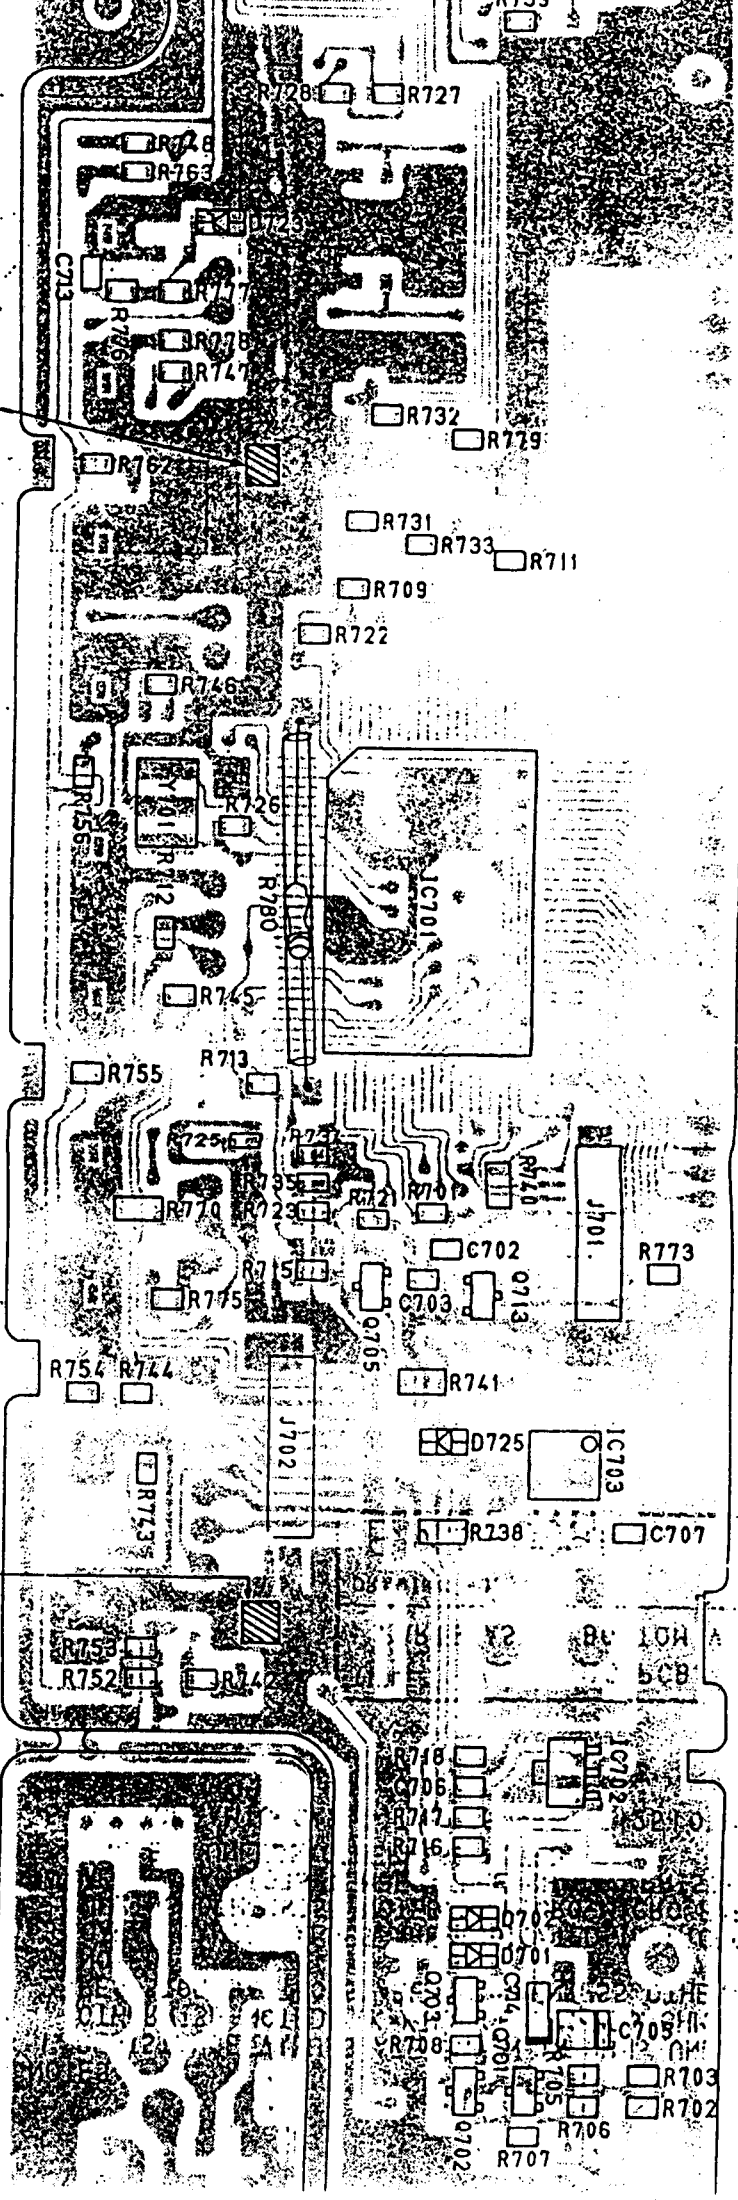

SCRAPE THEN
SOLDER

SCRAPE THEN
SOLDER

*R780 = 560 Ohm 1/4W 5%
Put complete resistor leads
in sleeve!
R780 VINYL TUBE
Ø 2.6 X 22mm*

R701	100K
R702	47K

R746	560
R747	560

C702	0.047
C703	0.022

D701	RLS4148
D702	RLS4148